

User Guide

STARTING THE DAY

With the lanyard attached, put the Sapphire around your neck and adjust the strap until the top of the Sapphire sits on your collarbone (about 5 in [13 cm] from your mouth).

Turn the microphone ON by pressing and holding the “TL” button on the front. The “TL” will change color, then stay solid BLUE when the Sapphire is on.

Speak in a normal conversational tone. Adjust the receiver volume (if accessible to you) and/or the Sapphire volume switch so that your voice is heard at the desired level.

TIP: Please note that you may not hear your own voice when the volume is at an ideal level. For first time use and occasionally throughout the year, have another teacher or student(s) confirm that your voice is clearly heard throughout the classroom.

ENDING THE DAY

Turn the microphone OFF by pressing and holding the “TL” button on the front. The “TL” light will go out when OFF.

Charge the microphone overnight by plugging it into the provided charge cord or drop-in charger. The “TL” button will illuminate RED when charging. GREEN indicates the battery is fully charged.

IMPORTANT: When using the drop-in charger, ensure the Sapphire is facing forward so that the “TL” button is facing the front of the charger. Gently, but firmly press down into the drop-in charger until it clicks. If it does not click in place, remove and retry. DO NOT force it as you might damage the connection.

FOR MORE INFORMATION VISIT TEACHLOGIC.COM/WELCOMEKIT


REV080012719

Sapphire


Infrared Wireless
Microphone

USER GUIDE



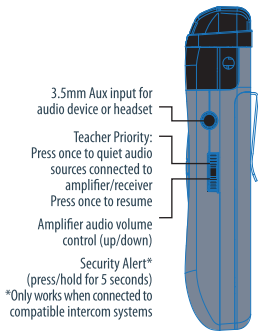

LEFT SIDE

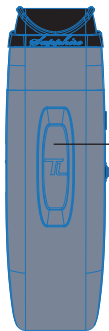


FRONT


Press/Hold:
Power ON/OFF

Press Once:
Mute ON/OFF


Battery Discharge Level

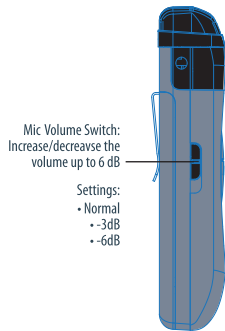


RIGHT SIDE

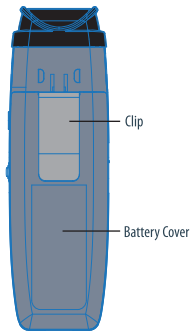

BACK

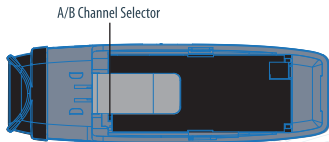


BACK WITH BATTERY & COVER REMOVED

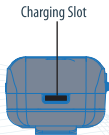

BOTTOM

AC CHARGER & USB CABLE

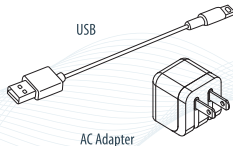

"TL" Indicator Lights:

- No light: Power is OFF
- Solid Blue: Power is ON
- Blinking Blue: Mic is muted
- Solid Red when using: Low battery
- Solid Red when charging: Charging in progress
- Solid Green when charging: Battery is fully charged
- Solid Purple: Audio devices connected to the receiver have been quieted